

## HFC 227EA/CO<sub>2</sub> EXTINGUISHING SYSTEM COMPONENTS

### Manual Pull Box (with Microswitch)

Use for remote emergency manual operation.

#### Installation Guide

Steel cable attached at manual lever of pilot cylinder. Run all cable straight and use corner pulleys to change direction. Ensure cable is protected with conduit.



Code No.	Description
CO2072-MS-LOC-RD	CO <sub>2</sub> manual pull station



### Manual Release/Abort Unit

Operating Voltage : 2 Amps @24 VDC

Code No.	Function
FAS258-AB-24V	With Abort Function
FAS258-NAB-24V	Without Abort Function

### Sounder

Operating Voltage : 24 VDC



Code No.	Description
FAS-4A-CS100	(2 Sounds)
FAS-4A-Y04-24VDC	(11 Sounds)
FAS-4A-24VDC-KP	



### Apollo 565 Smoke and Heat Detector & Base

Operating Voltage: 17 - 28 VDC

Code No.	Description
FAS-1B-55000-317	(Optical Smoke)
FAS-1B-55000-122	(Heat Grade 1)
FAS-1B-45681-200	(Base)

### Flash Alarm Beacon Light

Operating Voltage : 24 VDC



Code No.	Description
FAS-4A-V4-24VDC	
FAS-4A-24VDC-KPBS	



### Optical Smoke Detector

Operating Voltage: 17 - 28 VDC

Code No.	Description
FAS-EA-318-2	

### Manual Call Point

Rating : 10 Amps @ 24 VDC



Code No.	Description
FAS221-SRI-24V	
FAS221-KWPMAC-24V	



### Heat Detector

Operating Voltage : 24 VDC

Code No.	Description
FAS-KP-303-XX	
FASHC-306A	(Rate of Rise)

### Key Switch

Rating: 2 Amps @ 24 VDC



Code No.	Description
FAS260-PS-28V-RD	
FAS260-MS-XXX-KP	



### Discharge Indicator

Operating Voltage : 24 VDC

Code No.	Description
FAS251-24VDC-WP	
FAS251-24VDC-DC0	

### 6" Alarm Bell

Operating Voltage : 240 VDC



Code No.	Description
FAS194-LA-150-RD	
FAS194-LA-150-KW	



### Exit Sign

Supply Voltage : 24 VDC

Code No.	Description
FASKSB-15	(KELUAR)
FASKSB-RM	(KELUAR)
FASESB-15	(EXIT)

### Control Panels

Main Power Requirement : 220 - 240 VDC



Code No.	ZONE
FAS002-N0-002-RD	2 ZONES
FAS002-N0-004-RD	4 ZONES



### Smoke Tester

Code No.	Description
FAS262-CRC-071	